# MOBOTIX M22 Quick Installation MOBOTIX

## **Prerequisites** (MOBOTIX Camera, Standard PC, PoE Switch, CAT 5 Cable)



## Connecting the Camera (via PoE Switch)



## The First Image in the Camera (in MxControlCenter)



- Free-of-charge download from www.mobotix.com
- Install application from MSI file
- MxControlCenter automatically searches the cameras
- LED signal: camera is ready!

Manual Part 1 p. 43


## **Prerequisites Without PoE Switch**



## **Connecting the Camera** (Direct Connection via MX Power Adapter)



## The First Image in the Camera (in a Browser on Windows/Mac/Linux)

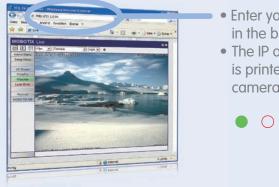

- Enter your camera's IP address in the browser address bar
- The IP address of your camera is printed on a sticker on the camera housing
- LED signal: camera is ready!

Manual Part 1 p. 40

## **Prerequisites** (Troubleshooting)

- Computer & switch need to have 10/100 Mbps network interfaces
- Using a PoE switch is the simplest method for connecting the camera
- Use the MX Power Adapter if a PoE switch is not available
- Order MOBOTIX accessories from www.mobotix.com or by phone (toll-free) 1-888-MOBOTIX

## Connecting the Camera (Troubleshooting)

#### Using PoE switch:

- Does the PoE switch support the IEEE 802.3af PoE standard?
- Is the camera cable connected to a PoE port at the switch?

#### Using an MX Power Adapter (NPA):

- Is the computer in the same subnet as the camera?
- Is the Power Adapter connected properly?
  (power supply in the "Power" connector, computer in the "PC" connector, camera in the "Camera" connector)

## The First Image in the Camera (Troubleshooting)


#### In MxControlCenter (MxCC):

- Downloaded MxControlCenter successfully from www.mobotix.com?
- Installation completed successfully?
- Camera search in the subnet found the cameras?
- For more information, see p. 64 in the Camera Manual and in the MxControlCenter User Manual

#### Display in a browser (Windows/Mac/Linux):

- IP address correctly entered in the browser address field?
- Firewall properly configured and camera port 80 reachable?

#### User Interface (MOBOTIX MxControlCenter)

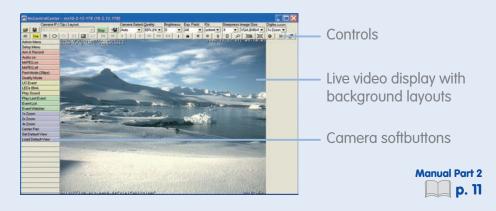

## **Basic Settings** (MOBOTIX MxControlCenter)







Start Stop Start/stop video streams (live and recorded)





Toggle Layout Editor on/off



Toggle background image mode on/off




## Advanced Settings (MOBOTIX MxControlCenter)







#### **User Interface** (MOBOTIX Camera)

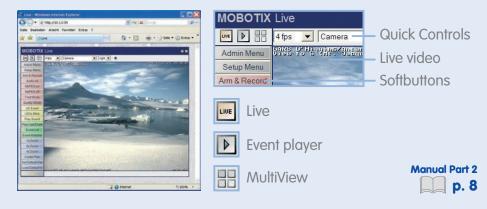

## **Basic Settings** (MOBOTIX Camera Softbuttons)



## Advanced Settings (MOBOTIX Camera)



#### Display logos in the live images

• Use the dialogs in **Admin Menu > Logos and Image Profiles** to configure the logo generator



#### Access control

• Use the dialogs in **Admin Menu > Security** to configure users, groups and the corresponding access rights



## External storage on file server

• Configure external storage in **Admin Menu** > **LAN Image Storage** 

#### **MOBOTIX** (Cost Benefits)

- Increased resolution reduces amount of cameras needed
- Reduced installation costs at any distance
- 3 Intelligent recording technology reduces required storage
- Event-controlled image rate minimizes storage costs
- 5 No additional power or heating required
- 6 Backup power requirement reduced by 8 times
- 7 Robust and practically maintenance-free
- 8 No software and no license costs
- Unlimited scalability and high return on investment
- 10 Additional functions and other extras included

### **MOBOTIX** (Technical Advantages)

- Progressive-scan instead of half-frame blur
- 2 Sun and backlight compensation
- 3 Dual camera technology: 2-in-1
- 4 Long-term, high-performance Terabyte recording included
- Simultaneous recording, event search and live viewing
- 6 Very low nework load
- 7 Bridging of recording during network failures
- 8 Day & night maintenance free
- Audio and SIP telephony
- 10 MxControlCenter software included

#### MOBOTIX (Contact)

**MOBOTIX AG** Luxemburger Strasse 6 D-67657 Kaiserslautern

Tel: +49 (0) 631 3033 103 Fax: +49 (0) 631 3033 190 sales@mobotix.com www.mobotix.com

Download the manuals from www.mobotix.com/support/manuals



